User Manual of Leeer-4B

Thanks for purchasing the MINI UPS (Leeer-4B). Please refer to the User Manual carefully before use:

- 1. Installation: connect the MINI UPS with the AC power socket (under circumstance of power disconnection), then connect the unit with your device. After that, turn on the AC power (MINI UPS will be charged automatically) and press the ON/OFF button to power the unit on and keep it switched on all the time. The green LED indicator will illuminate to confirm the MINI UPS is on and ready to provide protection.
- Please use this unit within suggested maximum level of voltage and wattage. Suggest: The unit performs most safely when the load wattage is below 60% of Rated Watts.
- 3. This unit must be fully charged before the first use.
- If the battery power is used up during a power shortage, the unit will turn off
 automatically to enter into the mode of protection, and you must recharge it
 before the next use.
- 5. MINI UPS is guaranteed for one year under the premise that they are used in accordance with this manual.
- 6. Provided being charged for long time, temperature of this unit may go up to 60°C. It is considered as a normal phenomenon.
- 7. After intermittence during the use, we can have the unit (remnant power is available) go on working normally via turning on the switch, in case of such function in need of customer. Furthermore, we are able to design product with special functions (such as time power supply, intermittent power supply, etc.) according to customer's requirement.
- 8. Please place the MINI UPS to avoid excessive heat and moisture. Also, turn off the unit provided no necessary for constant use.
- Do not open the back cover as you may get a shock from the high voltage power.

Status Indications

Power on (green)	DC/AC (red)	Buzzer (choose)	Conditions
on	off	off	MINI UPS is charged (ready state)
on	flash	alarm	MINI UPS is supplying power to the connected device
off	off	off	MINI UPS will be off automatically because its power is not enough for the device or it's switched off.

Technical Parameter

	Item	Specification
Rated Watts(W/VA)		200W(330VA)
		250W(410VA)
		300W(500VA)
1	Nominal Voltage	85-265VAC
Input	Frequency	47-65Hz
Output	Nominal Voltage	(optional) 100V、110V、120V-AC(±10%)X2;
	(on battery)	220V、230V、240V-AC(±10%)X2
	Frequency (on battery)	50/60Hz ±1Hz
	Transfer Time	8ms ± 2ms
Battery	Nominal Voltage/	14.4V/1.2AH-2.4AH
	Capacity	(select according to the wattage of MINI UPS
	Charge Time	10 hours (with the unit switched off)
	Charge Time	13 hours (with the unit switched on)
	Backup Time	≥5 minutes (subject to the level of load)
	Time	Ni-Cd or Ni-MH
	Туре	(select according to the wattage of MINI UPS)
Protection	Low Voltage Protection of Battery	11.0V(±1V)
	Reuse	Restore via activation of AC
	Surge Protection	Built-in surge protection
	High-voltage Protection	Built-in high-voltage protection
	Low-voltage Protection	Built-in low-voltage protection
	Lightning Protection	Lightning protection
Size(mm*mm*mm)		195*142*45
		1.11kg for Leeer-4B-200W
N	let Weight	1.17kg for Leeer-4B-250W
č		1.23kg for Leeer-4B-300W
Operati	ng Temperature	-18℃ to 45℃
	- 7	
Operating Relative Humidity		10% to 95%

Shenzhen Leeer Computer Tech Co., Ltd.

Email: leeer@leeer.com Website: www.leeer.com
Tel: 86-755 26957231-8888 Fax: 86-755 26957231(ext.8001)